

# REJUVENATION®

## Cabinet Ball Catch Installation Instructions

This Cabinet Ball Catch includes hardware that is designed to mount securely to cabinet door and face frame.

### PARTS INCLUDED

- 1pc Ball Catch with Strike
- 2pc flat head wood screws


**CALIFORNIA PROPOSITION 65 WARNING:** This product contains brass hardware components which contain lead, a heavy metal known by the State of California to cause cancer, birth defects, or other reproductive harm.

### MOUNTING INSTRUCTIONS

1. Carefully determine a desired Ball Catch location. Using tape measure and pencil, mark the locations for the catch (typically centered from front to back on the cabinet door. Use a  $\frac{3}{8}$ " drill bit to drill a hole  $\frac{3}{4}$ " deep. Press the Ball Catch into the newly created hole (placing a small piece of scrap wood over the ball catch and gently tapping with a hammer will assure the strike is flush with your cabinet door).
2. Determine the location for the strike on the cabinet face frame and drill a  $\frac{3}{8}$ " diameter x  $\frac{1}{4}$ " deep hole to allow for the indent on the back of the strike. Rubbing the Ball Catch ball with a crayon or lipstick and then closing the door will leave an indicator mark to assist finding the correct location for the strike.
3. Mark the location of the strike mounting screws and drill two  $\frac{1}{16}$ " pilot holes.
4. Attach strike with supplied screws. A small amount of wax or bar soap on the screw threads will ease installation. **Do not attempt to drive screws with a power drill/driver (solid brass screws will break off).** If necessary, strike tongue may be bent slightly downward after installation to ease door closing.

### CARE INSTRUCTIONS

Wipe with a soft, dry cloth. To protect the finish, do not use household cleaners or abrasives.

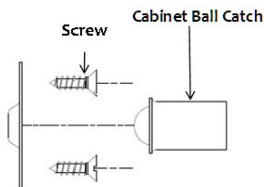

2550 N.W. Nicolai Street, Portland Oregon 97210  
Customer Service: 888 401-1900 rejuvenation.com