

REJUVENATION®

Bin Pull Installation Instructions

This Bin Pull includes hardware that is designed to mount securely to cabinet drawers.

PARTS INCLUDED


- 1pc Bin Pull
- 2pc #5 oval head wood screws

MOUNTING INSTRUCTIONS

1. Carefully determine a desired Bin Pull location. Using a pencil, mark the locations for each screw. ***You Must Drill Pilot Holes to Prevent Screws From Breaking.*** Use a 5/64 inch diameter drill bit for hardwood or 1/16 inch diameter drill bit for softwood, along with an appropriate drill to make pilot holes in the cabinet door/drawer. Using a steel screw of the same size to pre-tap the holes can be helpful on hardwoods.
2. Attach the Bin Pull using a screwdriver, being careful not to let the screwdriver strip the screws or scratch the finish. Do not over tighten. A small amount of wax or bar soap on the screw threads will ease installation. **Do not attempt to drive screws with a power drill/driver (solid brass screws will break off).**

CARE INSTRUCTIONS

Wipe with a soft, dry cloth. To protect the finish, do not use household cleaners or abrasives.

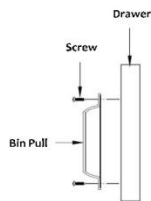

2550 N.W. Nicolai Street, Portland Oregon 97210 Customer Service: 888 401-1900 rejuvenation.com