


Installation Instructions 3530 Gate Latch



Hold the trim to the gate to determine the desired height of the thumb piece and the strike.

Exterior view

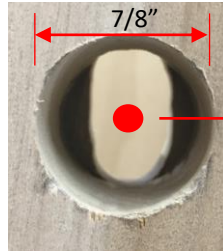

Drill a 7/8" diameter hole, 1/2" deep on the outside of the door to accept the thumb piece.

Guide Hole
Interior View



Centered in the 7/8" hole, Drill a pilot hole 3/16" from the outside to the inside.

Interior View



On the interior side, create a 3/16" wide **oblong** hole 7/8" in height. The height must match the height of the inside hole.



Install the outside trim with the thumb piece through the door.




Inside view with thumb piece installed.



Bar Guide – Knob covers larger opening when installed.



- Install the inside trim so that the bar is horizontal
- Install the bar guide to keep the bar horizontal
- This determines the strike position and install.

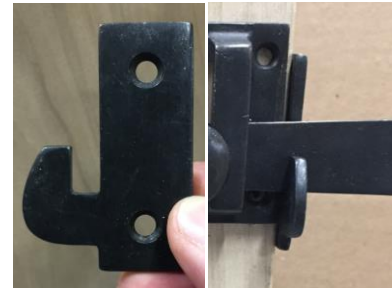

Install strike so that bar rests on bottom of strike.



When properly installed, the thumbpiece will engage the bar and lift above the strike.